



HP Pavilion 11 x360 Fan Replacement

Fix overheating issues by replacing your fan.

Written By: Natalie



INTRODUCTION


Unplug your device from any power source and turn off your laptop before beginning.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Remove Screws

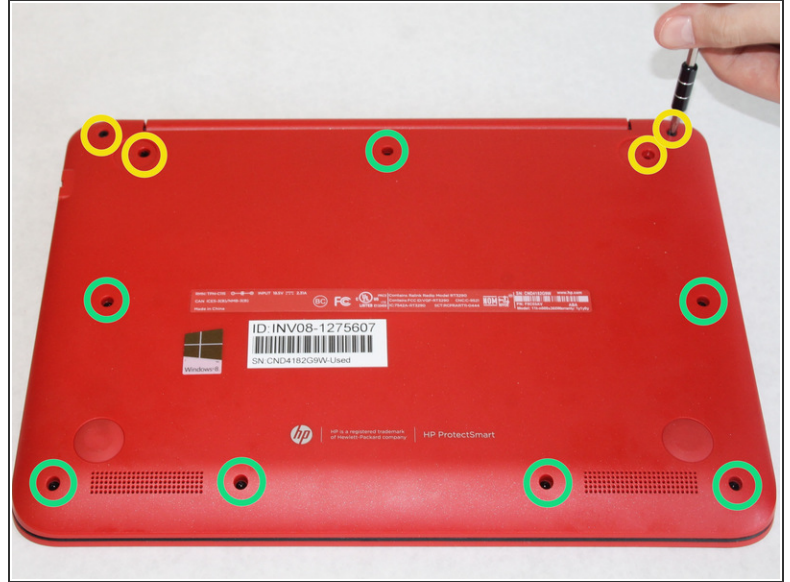


- Use the spudger to pry off the two rubber feet near the hinge of the laptop. This will reveal two hidden 9mm screws.
- You must remove eleven screws.
 - Four 9mm screws with the PH0 screwdriver.
 - Seven 6mm screws with the PH0 screwdriver.


Step 2 — Remove Backing



- Use the spudger to pry the corners of the laptop near the display hinges.
- Pry around the seam of the laptop with the plastic opening tool until the backing begins to pull apart.


 When you lift the bottom cover, there is a cable connected between the motherboard and the bottom cover. Be careful not to pull the cable loose!

Step 3 — Detach Cable

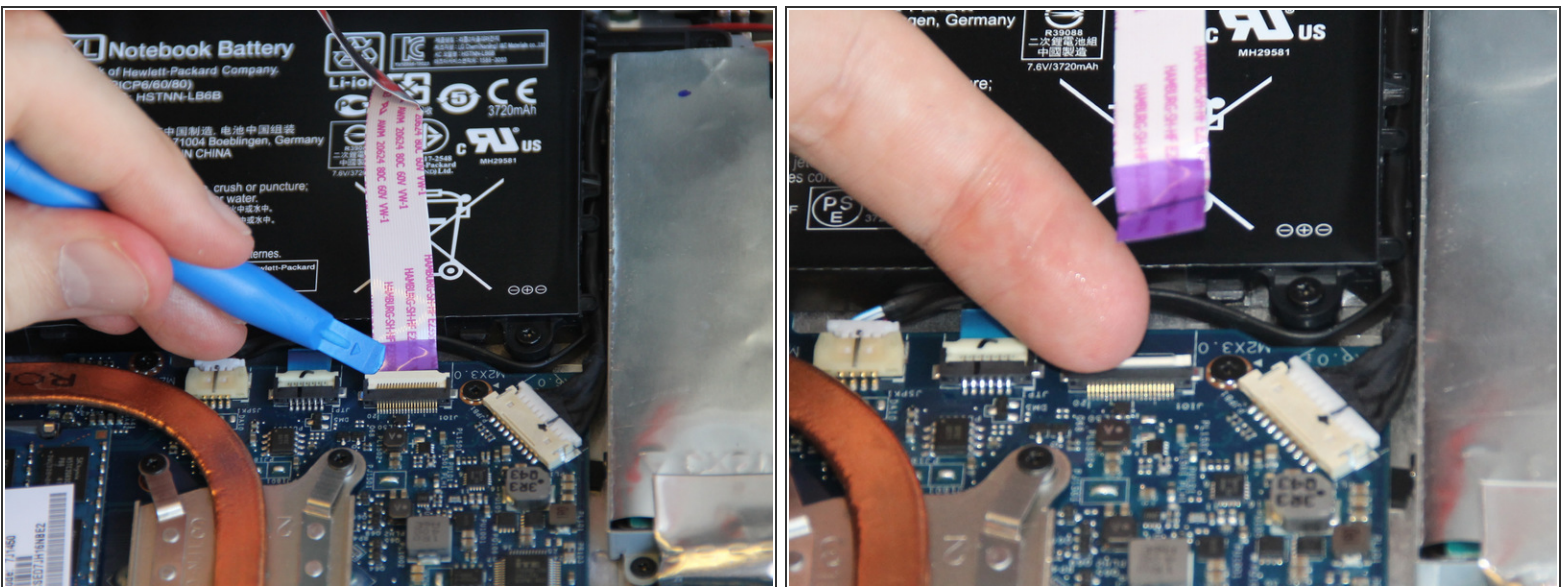



- Use the plastic opening tool to lift the white tab up at the connection.
- Pull the cable outwards.

Step 4 — Remove Screws

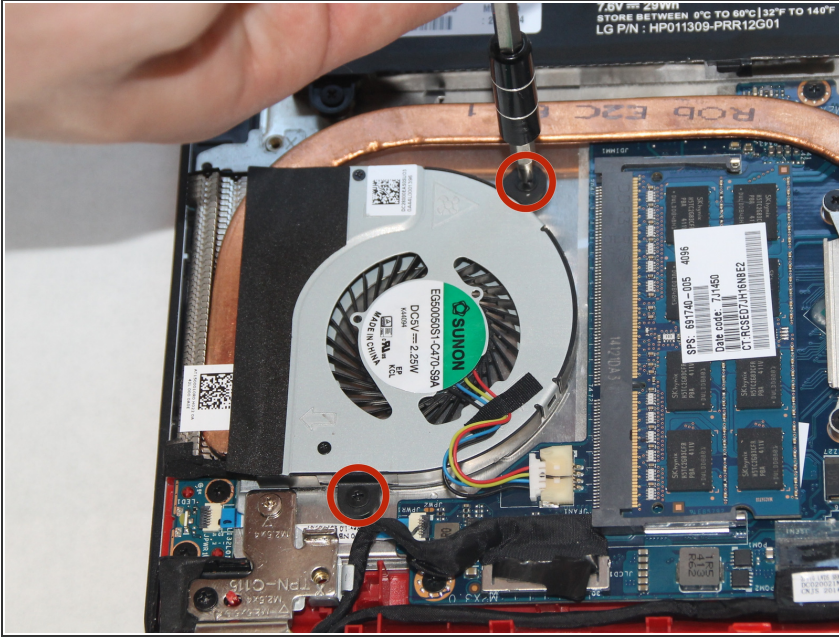

- Remove the two 3mm screws with the PH0 screwdriver.

Step 5 — Disconnect Cable

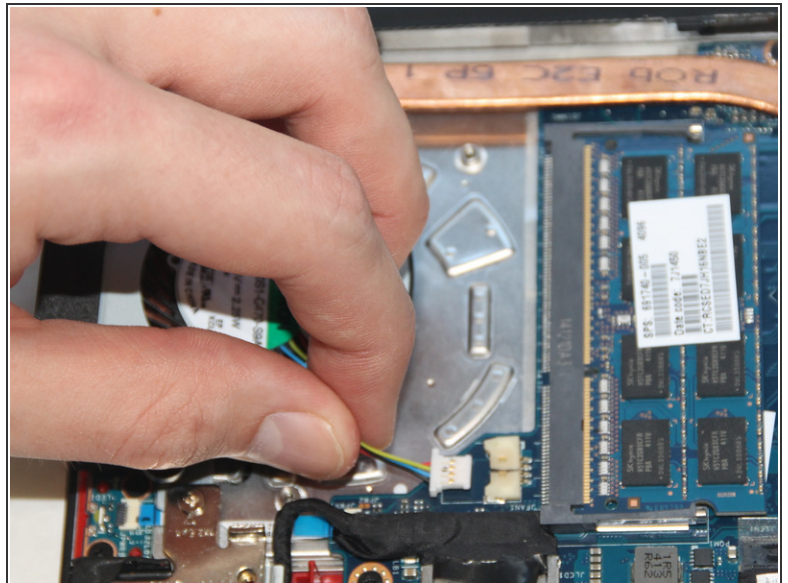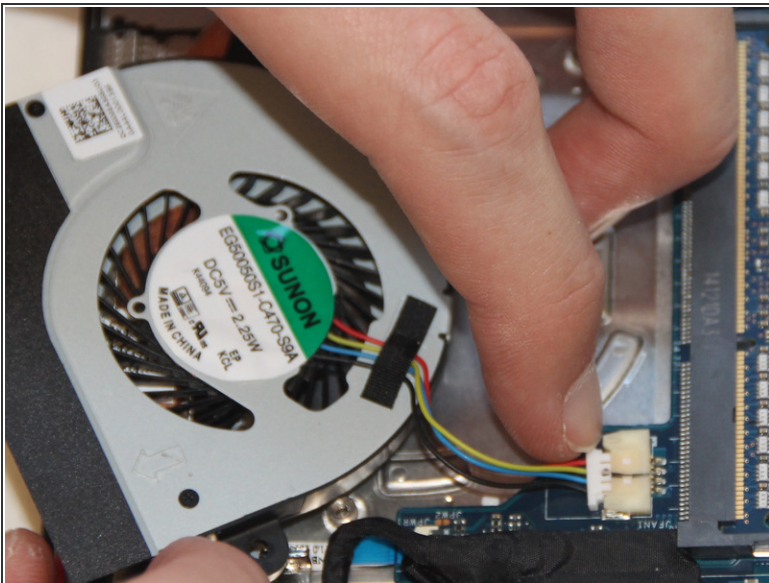

- Use your fingernails to slowly loosen the fan connection cable.
- After the cable is slightly pulled from the connection, grab the cable and pull it outwards.

To reassemble your device, follow these instructions in reverse order.

